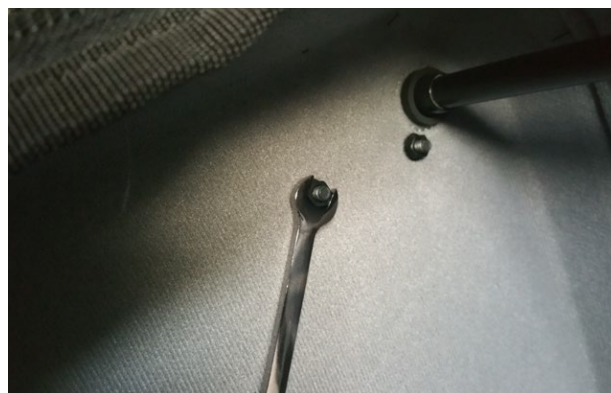 


**U FOOT 01:**

- + Tools required: 4mm hex key and M5 wrench

**U FOOT 02:**

- + Position the wrench on the interior nut in the main compartment

**U FOOT 03:**

- + Position the hex key on the bolt head, rotate, and begin loosening the bolt until it is free

**U FOOT 04:**

- + Remove the bolts completely and switch out the U-foot with the new part and resecure the nuts and bolts

**SKID RAIL 01:**

- + Tools required: 4mm hex key and M5 wrench

**SKID RAIL 02:**

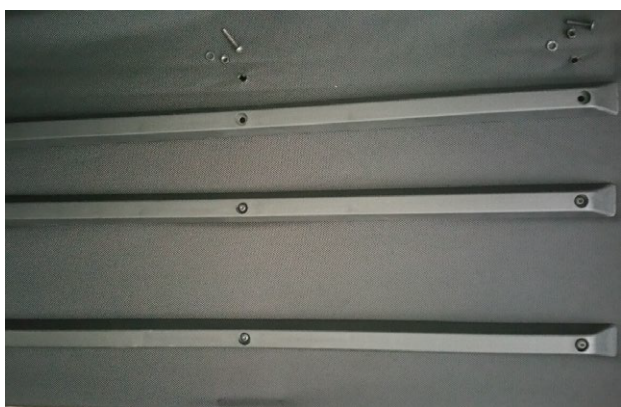
- + Access the nuts for the skid rails by unzipping the liner in the main compartment

**SKID RAIL 03:**

- + Position the wrench on the nut and hold secure

**SKID RAIL 04:**

- + Position the hex key on the bolt head, rotate, and begin loosening the bolt until it is free

**SKID RAIL 05:**

- + Remove the bolts completely and switch out the skid rail with the new part and resecure the nuts and bolts

**WHEEL HOUSING 01:**

- + Tools required: 4mm hex key and M5 wrench

**WHEEL HOUSING 02:**

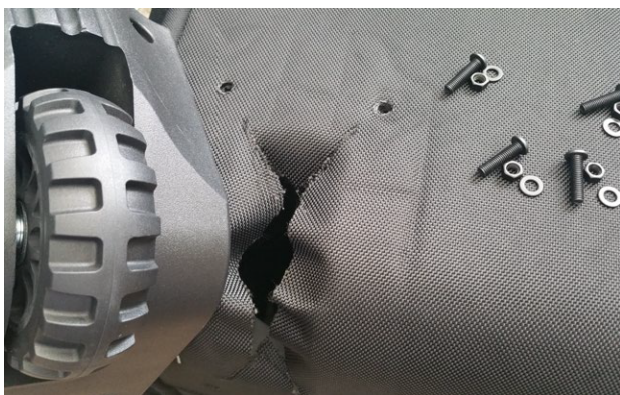
- + Access the nuts for the wheel housing by unzipping the liner in the main compartment

**WHEEL HOUSING 03:**

- + Position the wrench on the nut and hold secure

**WHEEL HOUSING 04:**

- + Position the hex key on the bolt head, rotate, and begin loosening the bolt until it is free

**WHEEL HOUSING 05:**

- + Remove the bolts completely and switch out the wheel housing with the new part and re-secure the nuts and bolts

**WHEEL REPLACEMENT 01:**

- + Tools required: 4mm hex key and M5 wrench
- + Remove wheel housing from the bag (see wheel housing replacement instructions)

**WHEEL REPLACEMENT 02:**

- + Position the wrench on the nut and hold secure

**WHEEL REPLACEMENT 03:**

- + Position the hex key on the bolt head, rotate, and begin loosening the bolt until it is free

**WHEEL REPLACEMENT 04:**

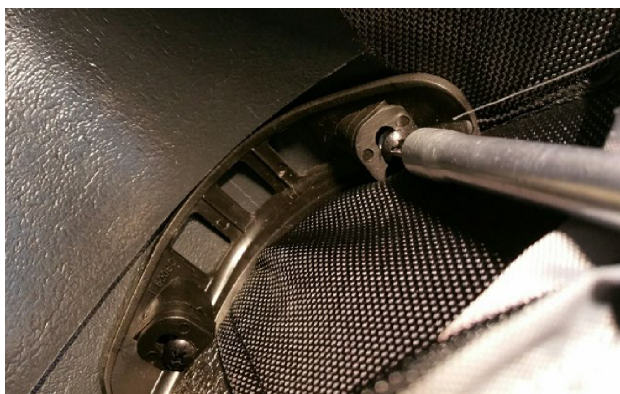
- + Remove the bolt completely and switch out the wheel with the new part, realign the center wheel slot with hole on the housing and re-secure the axle bolt
- + Reattach the wheel housing to the bag

**CORNER PROTECTOR 01:**

- + Tools required: Phillips screwdriver (size 2)

**CORNER PROTECTOR 02:**

- + Access the support plate and screws for the corner protector by unzipping the liner in the main compartment

**CORNER PROTECTOR 03:**

- + Unscrew the screws

**CORNER PROTECTOR 04:**

- + Remove the screws completely and separate the corner protector from the interior support plate. Replace with the new part and reassemble.